

# DELLA

## AUTOMATIC WASHING MACHINE

Item No.: 048-GM-48218



Thank you for purchasing the **DELLA** automatic washing machine.

- Please read this instruction carefully in order to operate the machine properly.
- Keep this manual handy for further reference.

## Installation and operation

### (1).Before washing

1. Install the machine on a firm and flat floor (allow most oblique angle to 2") if the machine is not leveled, the machine may make a big vibration and noise.
2. Suspend the drain hose on the hose hook at the right side of the machine; lay the drain hose down when you want to discharge water.
3. Set the water supply hose connect one rubber packing of the water supply hose to the end of the tap; connect the other one to the water supply port on the machine.
4. Plug the power cord into the socket, in case of the machine with two conductor power cords, be sure to connect the ground wire to a proper ground, never connect the earth wire to a gas pipe, a tap water pipe, a phone wire and lighting rod.
5. Check the laundry according to the indication of the items, confirm whether it can be washed or not, below are shown those which cannot be washed.

- Blanket
- Clothes with oil, solvents and chemicals
- Cloth shoes etc.

### (2).Washing guide

1. Put the laundry into the wash tub, turn the tap, let water into the tub according to the amount of clothing to be washed(the marks H.M.L. in the inner tub are high, medial and low water level).
2. Add the proper amount of detergent, if the amount of detergent is too much, the laundry can't be rinsed sufficiently, so please add the proper amount of detergent.
3. Turn the "WASH TIMER" knob to the desired wash time clockwise and the washing action will begin. Set the washing time according to how the laundry soiled or its amount. Normally, the timer for low soiled laundry is around 8 minutes and more than 12 minutes for the extremely soiled laundry.
4. After washing is completed, drain the water by laying down the drain hose, twist the laundry and prepare for rinsing.
5. The washing machine have vents, blocked vents are not carpet.

### (3).Rinsing guide

1. Suspend the drain hose again, put the laundry into the tub, and then let water flow into the tub at the proper level.
2. Set the rinsing time by turning the washing timer, normally, the rinsing time is set to around 5 minutes.
3. After rinsing time is completed, drain the water by laying down the drain hose and twist the laundry.
4. Repeat the above steps for 2 to 3 times.

### (4).Maintenance

1. Remove the power cord after washing
2. Wipe the water clean and dry with a soft cloth
3. Must clean tubs after bleaching or starching, otherwise, some pending will be created.
4. Removal of lint filters for cleaning.

## Guidance for safety and durability

1. Be sure to remove things such as keys, pins and coins from the laundry.
2. Wash oily or dyed laundry separately.
3. Wash fuzzy laundry by turning it in side out.
4. Wash delicate clothes, wrapping them in a nylon net.
5. Turn the insides of jeans with metal buttons or fasteners and trousers easy to catch lint out.
6. Do not install the washing machine to a direct sunlight or rain.
7. Do not install the washing machine around a damp place.
8. Do not sprinkle water over switches.
9. When plugging out the power cord, do not hold the wire.
10. Have children stay away form the washing machine.
11. Keep the washing machine away from fire or heat sources.

12. Do not wipe the machine with the volatile material, gasoline, etc.
13. Let water drain away from the drain water into the tub.
14. Do not pour over 50 degrees water into the tub.
15. Broken-power cord must be remove by specialist.
16. This appliance is not intended for use by persons(including children)with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safely.


## Trouble shooting

Trouble	Check up
No washing	Power failure?
	Fuse blown?
	Whether the power cord is connected to the socket properly?
No drain	Is the drain hose kept down?
	Is the drain hose twisted or the threshold too high?
	Is the drain hose frozen?
Washing is forceless	Is the clothes too much?
	Is the V belt lost?
	Is the voltage too low?

## Accessories

1. Water supply hose
2. User Manual
3. Drain hose

## Wiring diagram

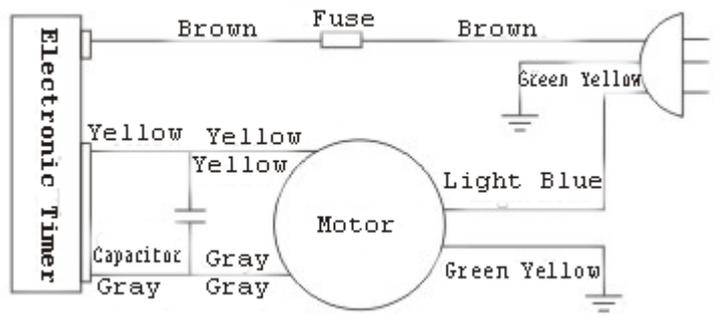

Caution: before checking trouble or repairing, unplug and touch both the plug pin and the earth wire to prevent the break down by the static electricity.

## Specifications

Power	110V/60Hz
Washing capacity	4.0KG
Standard amount of water	33L high water level ;24L low water level
Product dimension	420(width)x366(depth)x655(height)
Weight	9.5KG
Class:IPX4	

## Name of parts

